


# TI

31437

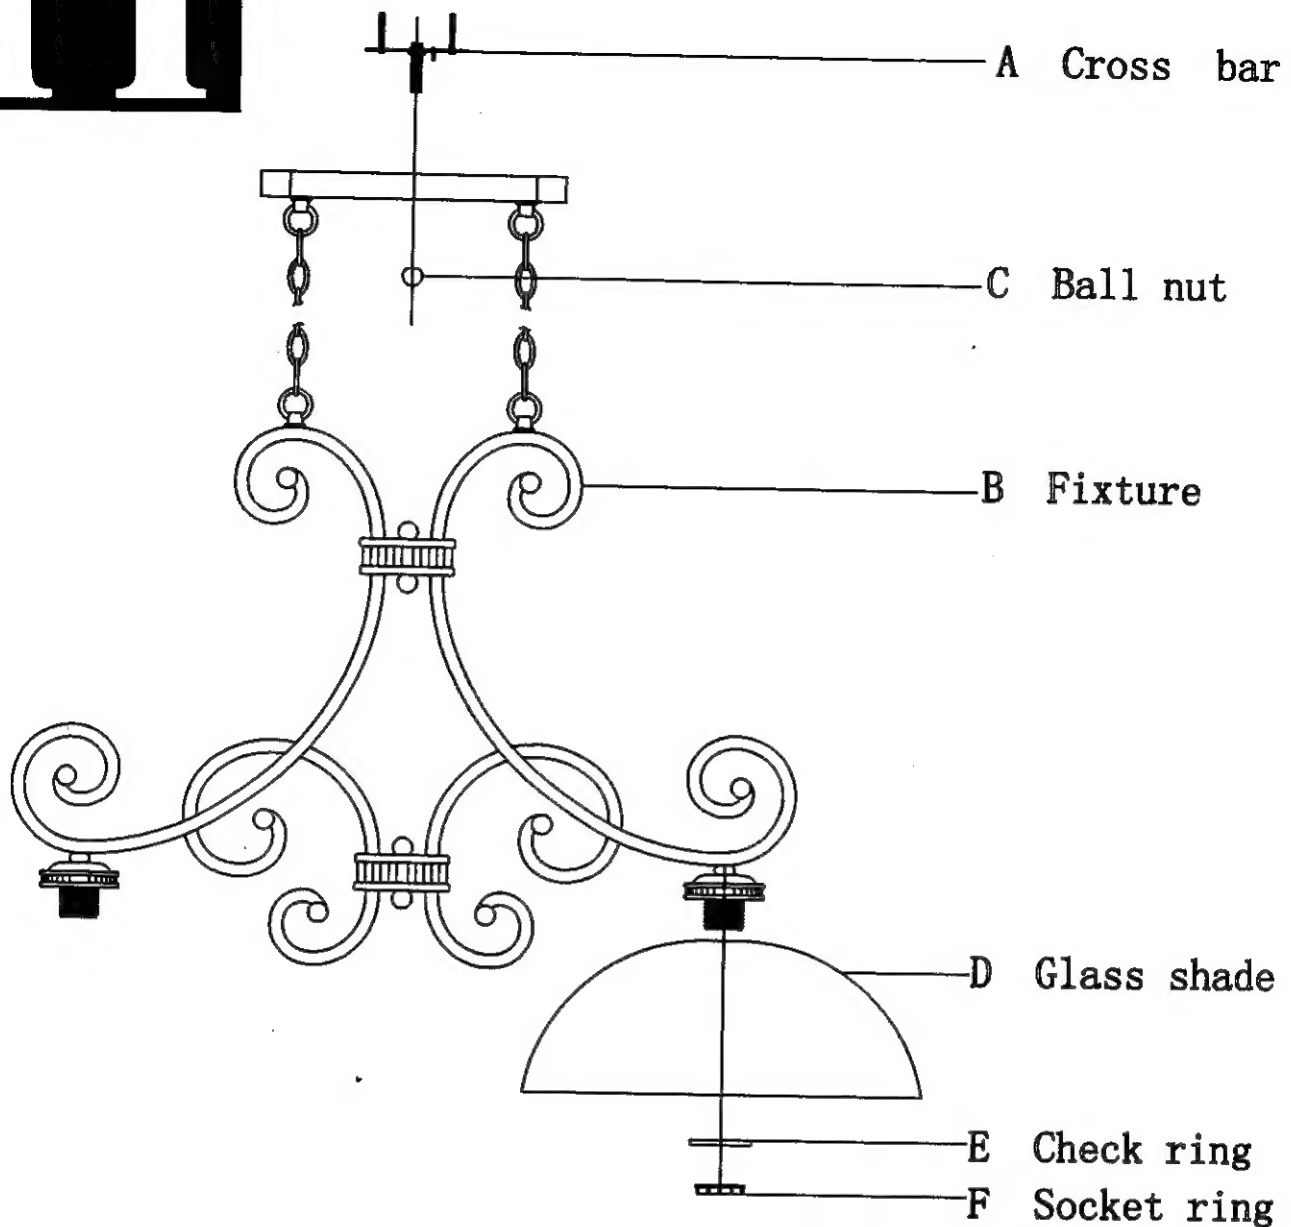

### Assembly instruction for 31437

- 1 Connect the supply & fixture wires at the junction box.
- 2 Attach the cross bar(A) to the junction box using the junction box screw.
- 3 Attach the fixture(B) by attaching the canopy to the cross bar(A).using the ball nut(C).
- 4 Attach the glass shades(D) to the fixture(B) and fix them using the check rings(E) and the socket rings(F).
- 5 Install the correct bulbs(not included).